


# ASSEMBLY INSTRUCTIONS FOR J 23591 CAMSHAFT REMOVER AND INSTALLER

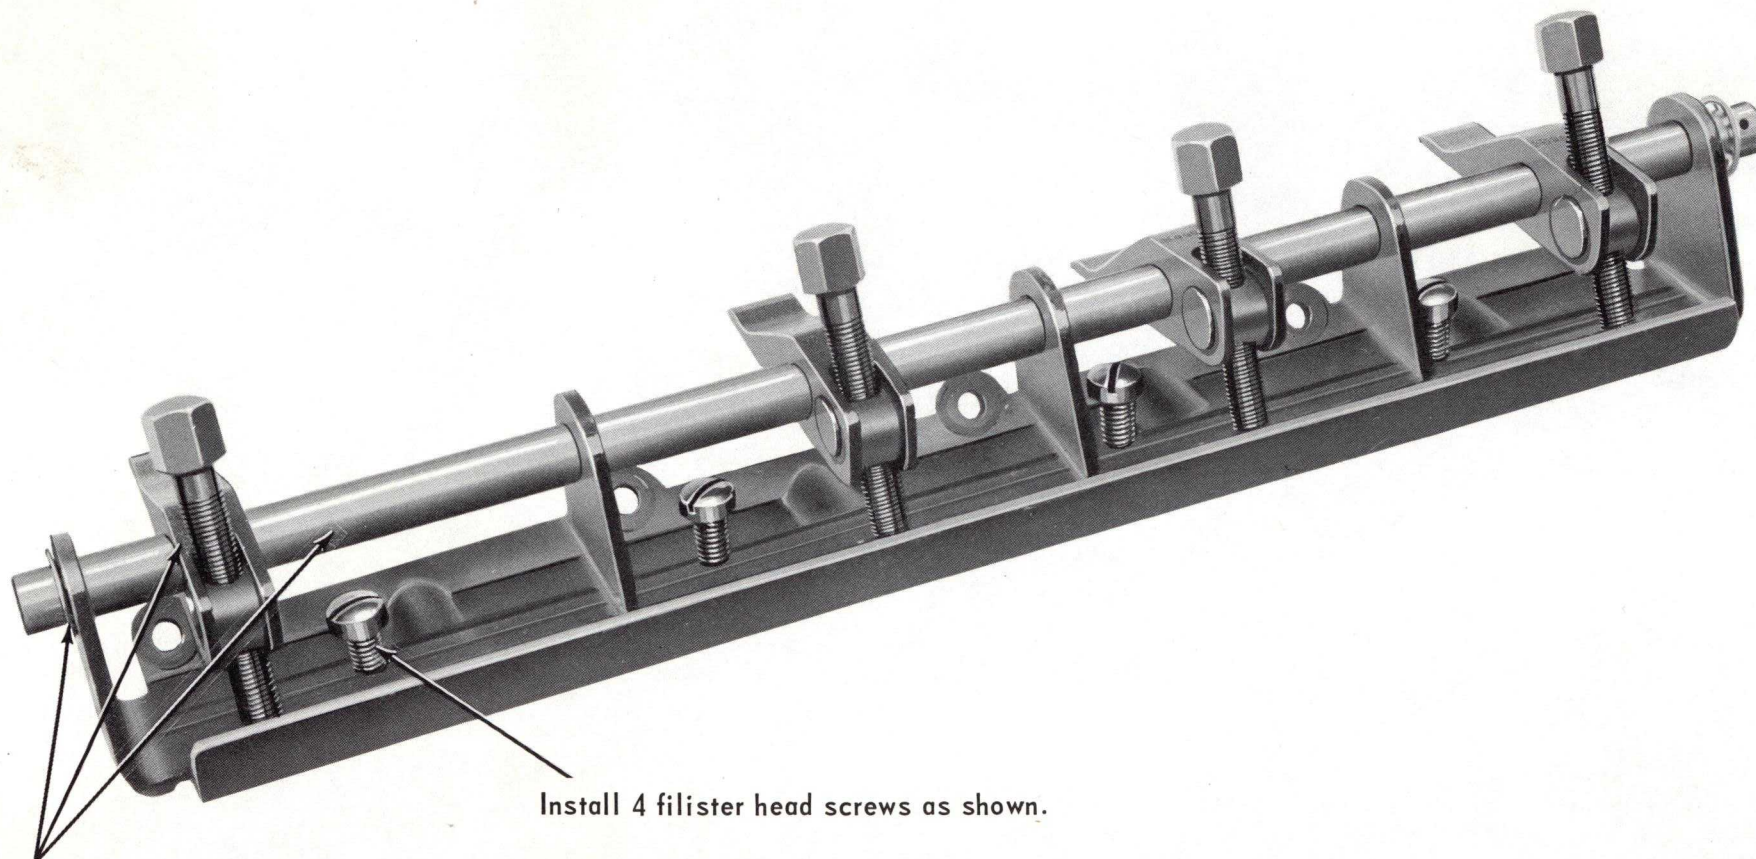

Install 4 filister head screws as shown.

Install bar, finger and screw assembly, and retaining rings as shown.

1. ALWAYS USE HARDENED BOLTS (SUPPLIED) TO ATTACH TOOL TO CYLINDER HEAD.
2. ALWAYS HAVE FILISTER HEAD SCREWS TOUCHING MACHINED SURFACE OF CYLINDER HEAD.

**SERVICE TOOL DIVISION KENT-MOORE CORPORATION**  
28635 MOUND RD., WARREN, MICHIGAN 48092  
PHONE: 313-539-5330 • TELEX: 023-5377

